

National Fiber - 50 Depot Street - Belchertown, MA 01007

## This is Cel-Pak cellulose, loose-fill, 25lb bag

Cel-Pak loose fill insulation, 25 lb. bag. Blowing machine: Krendl 2000 w/shredder, non-adjustable settings.					
R-Value @ 75 degrees f	Initial Installed Thickness	Minimum Settled Thickness	Bags Per 1000 sq. ft. (No joists)	Max. Net Coverage Sq. Ft./Bag (No joists)	Minimum Weight Lbs/Sq.Ft.
13	4.3	3.8	11.7	85.8	0.29
19	5.9	5.3	19.8	50.5	0.50
22	6.8	6.1	24.0	41.6	0.60
30	9.1	8.1	35.4	28.3	0.88
38	11.4	10.2	46.8	21.4	1.17
49	14.5	13.1	62.6	16.0	1.56
60	17.7	16.0	78.4	12.8	1.96

R means resistance to heat flow.

The higher the R-Value, the greater the insulating power.

To get the marked R-value, it is essential that this insulation be installed properly. If you do it yourself, get instructions and follow them carefully. Instructions do not come with this package.

## Read This Before You Buy

What You Should Know About R-values

The chart shows the R-value of this insulation. R means resistance to heat flow. The higher the R-value, the greater the insulating power. Compare insulation R-values before you buy.

There are other factors to consider. The amount of insulation you need depends mainly on the climate you live in. Also, your fuel savings from insulation will depend upon the climate, the type and size of your house, the amount of insulation already in your house, and your fuel use patterns and family size. If you buy too much insulation, it will cost you more than what you'll save on fuel.

To get the marked R-value, it is essential that this insulation be installed properly.