

Enviro-Dri® Weather Resistant Barrier Details



Counterflashing



Seam Seal



Window Pan




Sill Plate





Step One: Coat seam with membrane

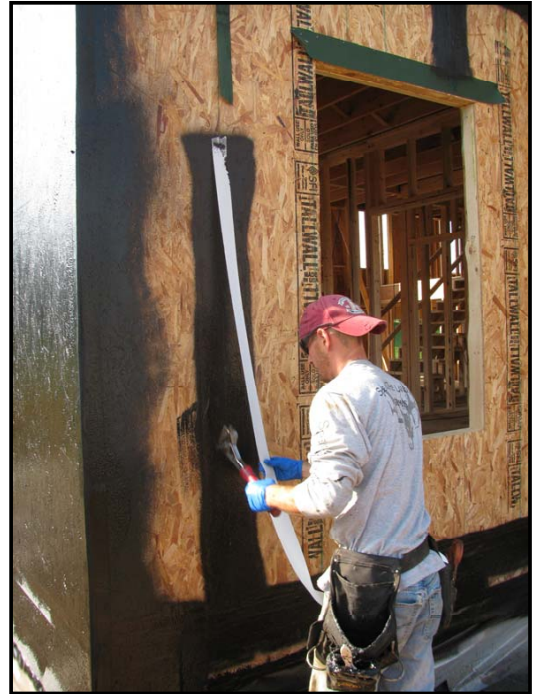

Step Two: Apply fabric to wet membrane



Step Three: Embed fabric into membrane to seat completely



Step Four: Coat fabric with membrane to finish seam

